














Commercial Microwave Oven range

A QUICK GUIDE TO OPERATING YOUR OVEN
















MANUAL USE

1. Place food in the oven and close the door
 2. Press Power pad or Defrost pad to select power level
 
 3. Enter time using number pads (eg: 1 min 50 secs)

 4. Press Start

 5. Oven will count down and beep at the end of cooking time
- N.B. To add extra time during cooking press:

 +20SEC






If the start pad is pressed after the end of cooking time the last instruction will be repeated

TO PROGRAM MEMORY PADS

1. Press together and hold for 2 seconds

2. Press chosen number pad to be programmed eg: No.2

3. Press Power pad or Defrost pad to select power level
 
4. Enter time using number pads eg: 30 secs

5. Press together and hold for 2 seconds


Display will flash, then go blank
The program is now set

TO USE PROGRAMS

1. Place food in the oven and close the door
 2. Select program pad eg: No.4
 
 3. For double quantity press x2 Pad before selecting program pad
  
- After the program pad has been pressed the oven will start automatically

SAMSUNG